



MistAway® Tankless Misting Unit – Gen III+


Set Up Instructions

Visit us on the web at
www.mistaway.com

Copyright © 2010 by MistAway® Systems, Inc.

Section 3 Setting Up the Unit

Using the Controller

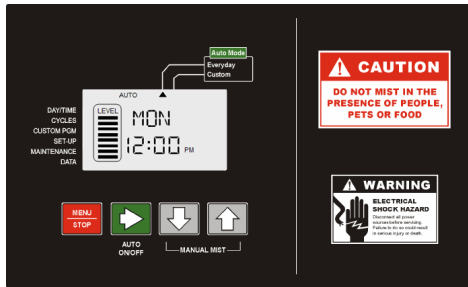

- Pressing Green ► button will cycle through each of four System Modes. The ▲ at the top of the display points to the active System Mode.
 1. OFF – Unit will perform a daily agitation cycle and otherwise sit idle.
 2. ON – Unit will allow Remote and MANUAL MISTs, but no AUTO MISTs.
 3. AUTO-EVERYDAY – Misting program runs daily. This is the most commonly used System Mode.
 4. AUTO-CUSTOM – Misting program runs only on days set in CUSTOM PGM menu.
- Pressing Red MENU/STOP button displays triangular cursor by DAY/TIME position on left side of display. Use ▲ or ▼ buttons to cycle through menu structure. Use Green ► button to select menu item and view or change data element within that item.
- Within a menu item, the convention is that the flashing data element can be changed with the ▲ or ▼ buttons. Move to the next data element with the Green ► button.
- Exit the menu item by pressing the MENU button. The unit will revert to previous System Mode in 3 minutes if the MENU button is not pressed.
- Clear any error code by pressing the Red MENU/Stop button for 5 seconds. The System Mode will return to its previous state (usually AUTO Everyday).
- To reset the controller to factory settings, unplug the unit, and hold down MENU and the ▲ buttons while plugging the unit back in. Mist Cycles, remote duration and number of nozzles must be reentered.

Section 3 Setting Up the Unit

- 11. Set System Mode**
 - With the display showing day, time and level, press Green ► button to position the ▲ at top of display pointing to the active System Mode:
 - OFF - daily agitation cycle only
 - ON – remote and manual, but no programmed mist
 - AUTO Everyday – program runs daily. This is the usual mode.
 - AUTO Custom – program runs on days configured in CUSTOM PGM
- 12. Test by Activating Remote Mist**
 - Clear area
 - Pres MIST button on transmitter
 - Unit will FILL, DOSE, insecticide, Agitate (AGT) and MIST.
- 13. Determine Nozzle Flow Rate of Circuit**
 - DATA Menu, read AFR (average flow rate) value
 - Enter that value as the nozzle flow rate, NFR, to be used in system error calculations
 - DATA Menu, NFR. Press Green ► button for 5 seconds, then use the ▲ or ▼ buttons to adjust value to be the same as read in AFR.
- 14. Close Lid and Lock**
 - Secure key in a safe location.

Section 3
Setting Up the Unit

- j. Establish optional External Alarm**
- SET-UP Menu, ALT.
 - If sensor installed, set time (in seconds) that alarm will sound prior to each scheduled and remote mist.

9. Set Misting Schedule

- a. Set AUTO MIST Cycles**
- CYCLES Menu.
 - 2 – 3 scheduled mists of 30 – 60 seconds in duration is common.
 - See Section 5, Managing Insecticide for field standard frequency, duration and mist times.
 - Blinking C# identifies each automatic mist cycle with current mist duration and mist time. Limit is 24 cycles per day.
 - Set mist duration and time (note AM/PM) for each desired scheduled mist.

- b. Set AUTO MIST Days**
- If you don't want to schedule mists for every day.
 - CUSTOM PGM Menu.
 - Set selected days to ON or OFF.
 - System Mode must be set to AUTO Custom.

- 10. Charge Insecticide**
- MAINTENANCE Menu, scroll to CHG.
 - Depress Green ► button 5 seconds.
 - DOSE will flash for extended period as batch tank of fresh water is brought to target concentration.

Section 3
Setting Up the Unit

- 1. Position Gen III+ Unit**
 - On firm level surface.
 - Free from flooding or sprinklers.
 - Near GFCI outlet and faucet.
- 2. Install Water Supply Line**
 - Confirm faucet is able to deliver at least 1 gal/min..
 - Be careful not to introduce dirt or other contaminants into line.
 - Insert 3/8" tubing/filter assembly into 3/8" bulkhead fitting located at the back right corner of unit.
 - Thread adapter onto faucet (or optional hose bib "Y").
 - Measure and cut 3/8" nylon tubing
 - Run water to flush line before connecting to filter inlet.
- 3. Connect Nozzle Circuit**
 - To 1/4" bulkhead fitting at back right corner of unit.
 - If zone kit, install according to instructions provided.
- 4. Connect Remote Antenna**
 - Thread onto coax fitting on top of unit.
- 5. Connect Electric Power**
 - GFCI Outlet.
 - 115 volts minimum. Confirm voltage with multi-meter.
 - 15 amp circuit required. Unit draws 9 amps when misting. Ensure total load of unit plus all other devices on circuit does not exceed breaker rating.
- 6. Run Inspection Cycle**
 - MAINTENANCE Menu, scroll to INS.
 - Depress Green ► button 5 seconds
 - Unit will fill and mist for 5 minutes or until stopped.
 - Confirm pump pressure (240 psi) and insert plastic plug into pump adjustment port.
 - Confirm no leaks in nozzle circuit
 - If zone valve installed, repeat for INS2.

Section 3
Setting Up the Unit

7. Install Insecticide and Program Dose Settings

- a. **Secure Cap on Bottle**
 - Remove factory cap and seal from pour port.
 - Thread bottle cap onto pour port, ensuring it is not cross-threaded or too tight.
- b. **Vent Opposite Port and Insert Bottle into Coupler**
 - Remove seal on vent port so that bottle does not collapse as insecticide is pumped out.
 - Insert bottle into coupler (Pressing button on coupler will free bottle for removal.)
 - EMPCAR (empty cartridge) continues to appear in display.
- c. **Set Dose Settings**
 - MAINTENANCE Menu, scroll to REFILL
 - Depress Green ► button 5 seconds to enter routine.
 - Set MIX ratio (parts water to 1 part concentrate) to target. Default is 108:1 See Section 5, Managing Insecticide for guidance
 - Push Green ► button to advance
 - Set bottle size (BOT) in ounces. Default is 64 oz. Range is 2 to 256 oz.
 - Push Green ► button to advance
 - Set LEVEL in the bottle. Eight bars indicates a full bottle of the size entered in previous step. Four bars indicates bottle is ½ full.
 - Push Green ► button
 - DONE will be displayed.
 - VENT will be displayed. Confirm VENT by pushing Green ► button.

Section 3
Setting Up the Unit

8. Program System Setup

- a. **Set Daylight Savings Time switch**
 - DAY/TIME Menu.
 - Set to ON if daylight savings in effect, OFF if not.
 - Press Green ► to advance.
- b. **Set Day and Time**
 - Set Day and Time. (note AM and PM)
 - Exit by pressing Menu button.
- c. **Set REMOTE MIST Duration**
 - SET-UP Menu, REM.
 - Set duration in seconds.
- d. **Orient Remote Transmitter**
 - Set dip switches in remote transmitter. (see Section 4, Using the Remote)
 - SET-UP Menu, LRN.
 - Depress Green ► button 5 secs, until LRN On and countdown starts.
 - Depress Remote Transmitter button until DONE is displayed.
- e. **Set MANUAL MIST Duration**
 - SET-UP Menu, MAN.
 - Set duration in seconds.
- f. **Set # of nozzles**
 - SET-UP Menu, NOZ.
 - If zone valve installed, repeat for NZ2.
- g. **Set Agitation Parameters**
 - SET-UP Menu, AGT.
 - Set duration of agitation that occurs prior to each AUTO mist. Default is 15 seconds.
 - Set time of once-daily agitation. Default is 3:00 pm.
 - SET-UP Menu, RAG.
 - Set duration of agitation that occurs prior to each REMOTE mist.
- h. **Establish optional Wind Sensor**
 - SET-UP Menu, SEN.
 - If sensor installed, ON. Otherwise OFF.
- i. **Set Max Wind Speed (wind sensor required)**
 - SET-UP Menu, WND.
 - Set max wind speed.